SPY×FAMILY TAMAGOTCHI

Instruction Manual | Ages 8 and Up

© Tatsuya Endo/Shueisha, SPY×FAMILY Project
® & © 2023 BANDAI

BANDAI NAMCO | BANDAI

MADE IN CHINA
Manufactured for Bandai Namco Toys & Collectibles America Inc., 23 Odyssey, Irvine, California 92618.

Actual size, color, style and decoration may vary.

Bandai logo: ® and © 2023 BANDAI. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai.
© BANDAI. All Rights Reserved.

⚠ WARNING

Parents, please be sure to read the following information:

- Not suitable for children under 3 years. Small parts. Choking hazard.

⚠ NOTE

Misuse of batteries may cause overheating, rupture, or leakage. Please note the following
- WARNING! : This product contains a button cell battery. A button cell battery can cause serious internal chemical burns if swallowed.
- WARNING! : Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate.
- Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

Do not place in water or operate with wet hands. This may cause the product to break. Avoid use or storage in high humidity.

The SPY×FAMILY Tamagotchi are small. Please be careful not to put them in the wash while they are still in your pocket.

<Precautions for Use>
- We cannot compensate for data loss.
- Plastic packaging materials should be discarded immediately after opening.
- Do not place this product on plastic sofas, seats, tiles, etc. Prolonged contact may cause the color to transfer.
- Do not roughly pull or bend the moving or mounting parts in unreasonable directions.
- The batteries in the set are for testing purposes only. If the screen display becomes difficult to see, replace all button batteries with new ones.
- This product consists of delicate electronic components. Do not drop, wet, stain, or disassemble. Avoid using or storing the product in places where it will be exposed to extreme temperatures.
- In the case of a malfunction, press the reset switch to restart the device.
- Clock System: Daily difference ±10 sec.

1 The Device

Front

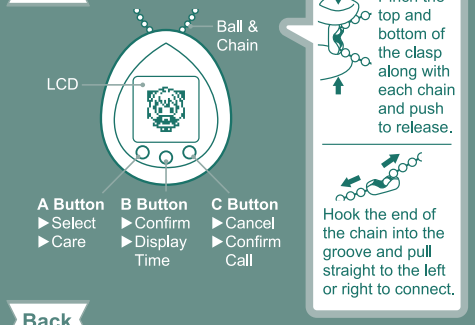

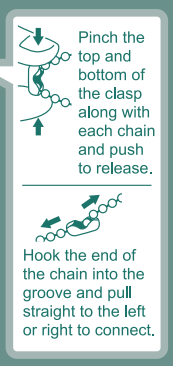
Pinch the top and bottom of the clasp along with each chain and push to release.
Hook the end of the chain into the groove and pull straight to the left or right to connect.

Back

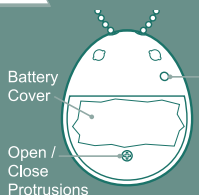

*For illustrative purposes only.
*Please note that products may differ slightly.

2 School Uniform Anya is Born

1) Pull out the tab from the bottom of the device.
   ►The device will beep and the clock setting screen will appear.
2) **Resetting**
   Press the reset switch on the back of the device with a narrow rod or similar object.
   ►The device will beep.
   (Do not press the reset switch hard with a pointed rod, mechanical pencil lead, or similar.
   Failure to do so may result in damage to the device.)
   (Always press the reset switch after replacing batteries.)

3) **Clock Settings**
   Press the A button to select the current hour and then minute.
   To confirm, press the B button.
   To return to the previous selection, press the C button.
   (AM means before noon and PM means afternoon.)
4) **School Uniform Anya is Born**
   Once you set the clock, you'll receive a call to notify you of Anya's acceptance and enrollment at Eden Academy.

*If the screen is not correct or malfunctions, please reset.
*This product cannot store data. When the battery is replaced or the device is reset, the play history will be reset. Please be aware.

3 The Clock

How to display the clock

Press the B button on the character screen to go to the clock screen.
Press the B button again to return to the character screen.

How to adjust the clock

Press the B button to enter the clock screen, then press the A button while holding down the C button to enter the clock setting screen.
After that, it is the same as in **Clock Settings** (see **►2.School Uniform Anya is Born**).

4 Sound ON / OFF

While on the character screen, press the A button while holding down the C button to enter the sound ON / OFF selection screen.
Press the A button to select 🔊 (ON) or 🔇 (OFF)
and press the B button to confirm.
If it is turned OFF, no ringing will be heard. Please be aware.

5 How to Replace Batteries

When the battery depletes, the LCD screen becomes difficult to see and all operations are subsequently disabled. If the battery replacement screen appears, replace the batteries with new ones.

1) Use and turn a screw driver in the direction of the arrow, (Fig.❶) Remove the battery cover located on the back of the device.(Fig.❷)
2) Remove the depleted batteries and insert new button cells (LR44 ×2, sold separately), making sure not to misplace the ⊕and⊖. (Be sure to replace both batteries.)
3) While making sure the hook of the cover is properly set on the back of the device, turn the screw driver in the opposite direction as 1) to close the cover.

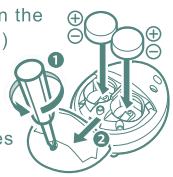

Be sure to reset.
(see **►2.School Uniform Anya is Born**)

6 Caring for Anya

Calling

When Anya calls out to you, tend to her needs, whatever they may be at the time. If you don't notice her calling, you can press the C button to see her current state.

Southern Stew

If Anya is hungry, press the A button to select MEAL then FOOD from the option screen, and press the B button to confirm and give her a Southern Stew. (Anya can not eat Southern Stew when she is full up, Master Henderson appears of full, asleep, and tense.)

Peanuts

When Anya is cranky, press the A button to select MEAL then SWEETS from the option screen, and press the B button to confirm and give her Peanuts. (Anya cannot eat peanuts when Master Henderson appears of full, asleep, and tense.)

Electricity

When Anya goes to sleep, press the A button to select (OFF) from the option screen, and press the B button to confirm. This will turn off the lights. (When Anya is asleep, the only operations that can be performed are turning ON / OFF the lights, displaying and adjusting the clock, and turning ON / OFF the sound.)

Master Henderson's Elegance Check

Master Henderson appears at regular intervals.
Master Henderson will occupy the screen as time goes by, so press the A button to act elegant before he takes over the entire screen.
(When Anya is asleep or tense, she cannot act elegant.)

Mini Games

Enjoy three different mini games.
Press the A button to select MISSION then which of the three mini-games to play from the option screen, and press the B button to confirm.
(You cannot play mini games when Master Henderson appears of full, Anya is asleep, and tense.)

Mini Game / Dodgeball

Press the button to avoid the ball flying from the left.
(A button: Move up.
B button: Move down.)
Get a perfect by not getting hit by a ball 20 times.
If you are hit by a ball the way, you fail.

Mini Game / Run from the Bad Guy!

Press the A button repeatedly for 10 seconds.
The more you press, the further away you can get from the bad guy. Press the button a lot so the bad guy doesn't get you!

Mini Game / S.P.Y. Scramble

The letters "S", "P", and "Y" randomly scroll down from the top. You must line them up in "S", "P", "Y" order from left to right by stopping them with the B button.
Get a perfect by lining up "S", "P", and "Y" in order five times in a row.
You will fail if you don't press the button for 10 seconds.

Everyday Scenes

At certain times of the day, you can catch a glimpse of some of Anya's family and her school life with frends.
Press the A, B, or C button during the 3 minutes and you may be able to view the rest of the everyday scenes.
(If no button is pressed during the 3-minute period, or if you do not view the rest of the everyday scenery, the screen will return to normal.)

Fidgeting

Anya will get tense if you neglect her during Master Henderson's elegance checks or you neglect to take care of her.
If she gets tense, press the A button until she gets back in a good mood.
If she remains tense all the time, you will have to say goodbye.
(While tense, the only operations that can be performed are displaying and adjusting the clock, and turning ON / OFF the sound.)

Saying Goodbye

If you continue to take good care of her, you can stay with Anya forever.
But if she remains tense or is repeatedly tense, you will have to say goodbye.

▶ ▶ ▶ Start Taking Care Again

On the screen after the goodbye or departure, press the A button while holding down the C button to start from **2. School Uniform Anya is Born** again.
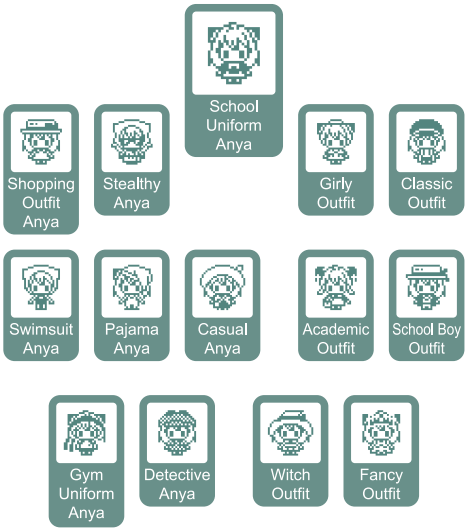
Anya's outfit changes depending on how you spend your time with her! See Anya in many different styles.